


Ecophon Wall Panel C

2700x600

M195

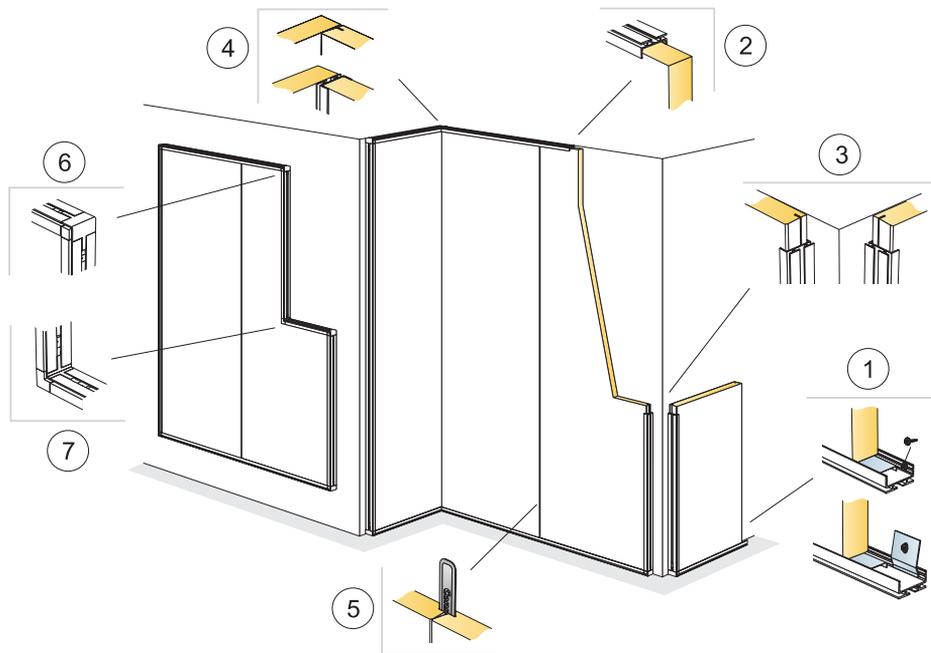

1. Connect WP Profile L=2687 mm, fixed (alt. with Connect Fixing bracket 0214) at 400 mm centres, with Connect WP Space bar, L=2400 mm.




2. Connect WP Profile L=2687, fixed at 400 mm centres.



3. External wall corner: Connect WP Profile L=2687, fixed at 400 mm centres.




4. Internal wall corner: Cut panel and Connect WP Profile L=2687 alt full size panel without profile.




5. Joint between panels (Connect Spline 0219 can be used to secure the panels).






6. Connect WP External corner mounted in Connect WP Profile L=2687.











7. Connect WP Internal corner mounted in Connect WP Profile L=2687.





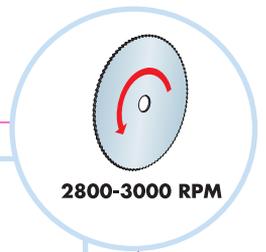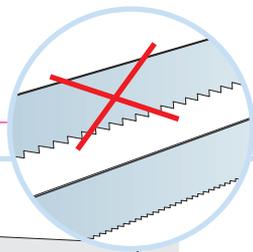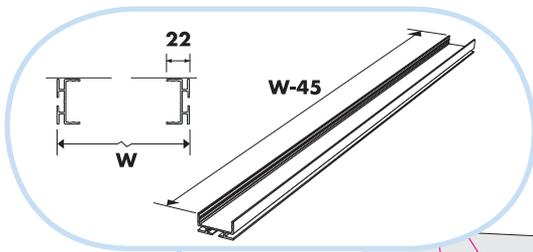


1

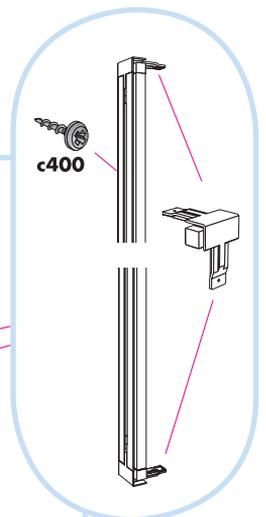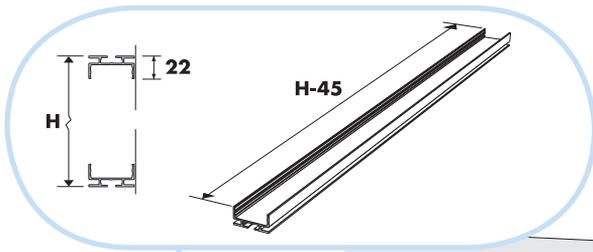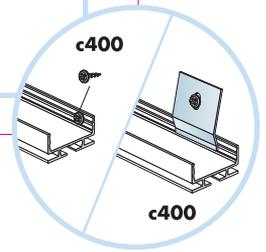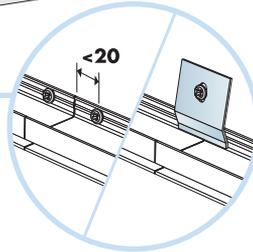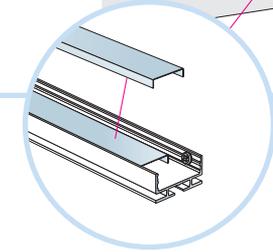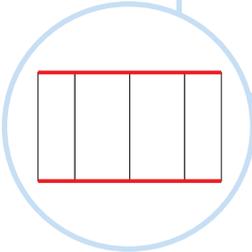
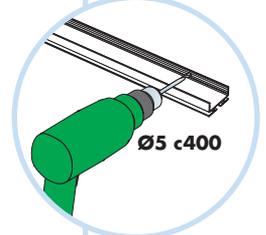
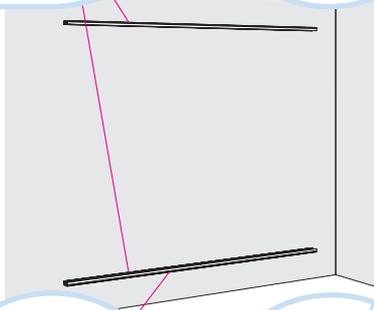


2


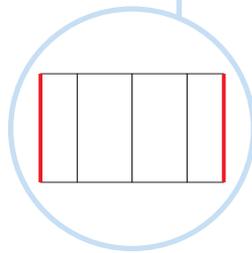
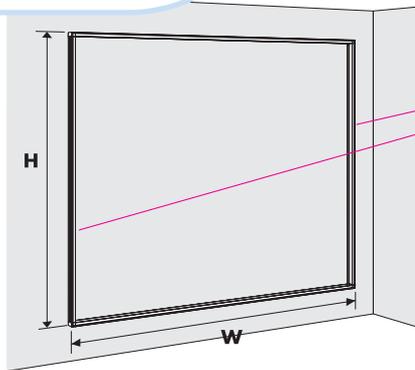



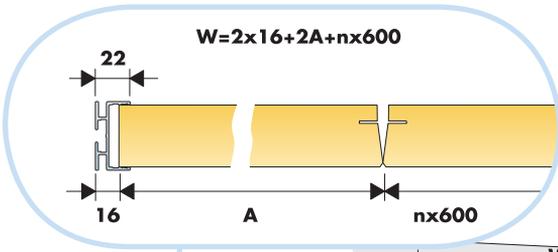


3


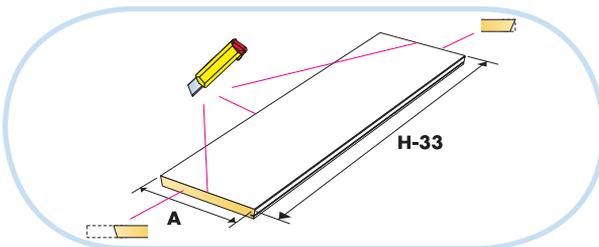
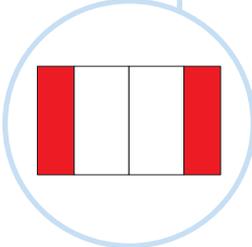
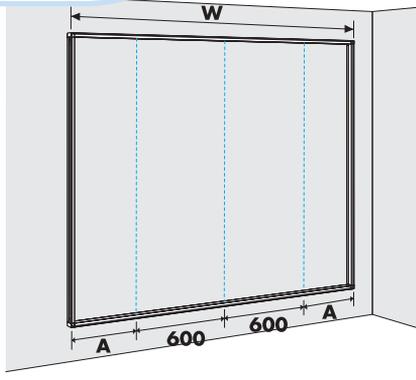


4

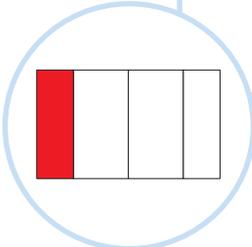
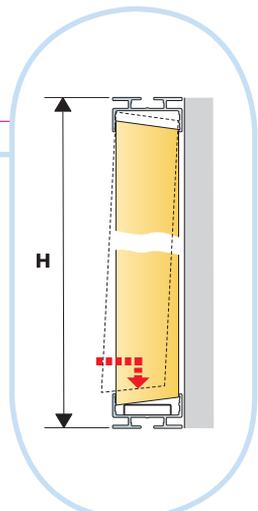
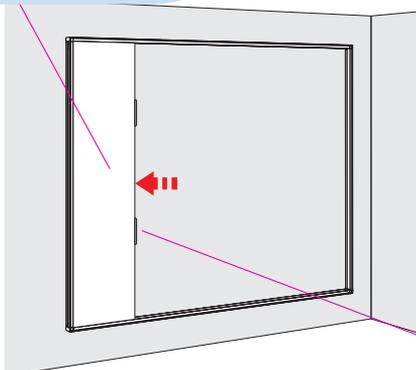


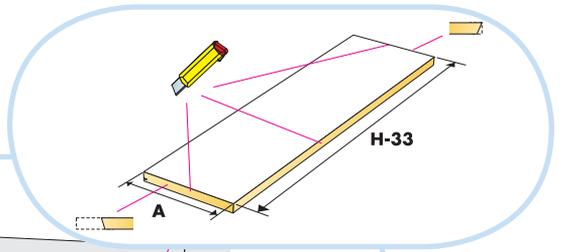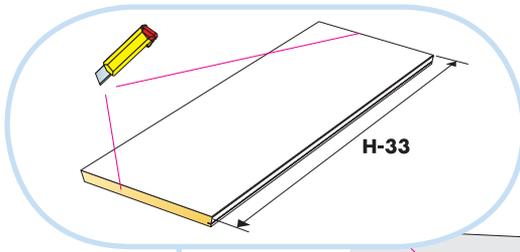


5

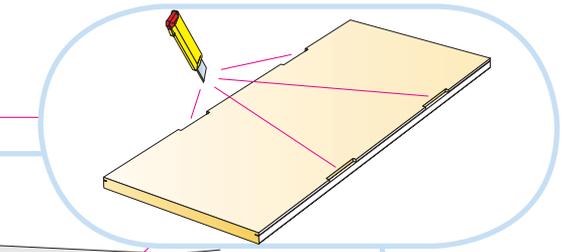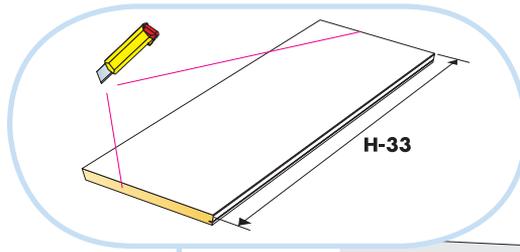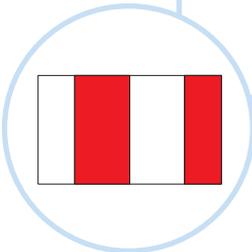
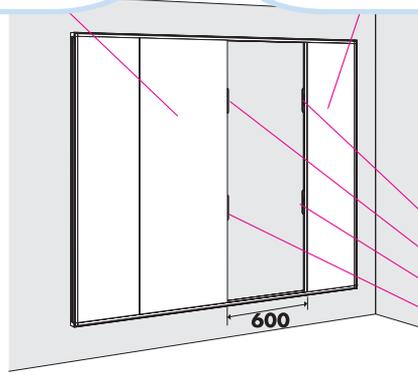


6



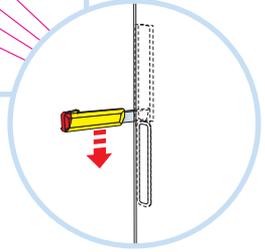
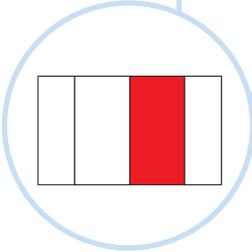
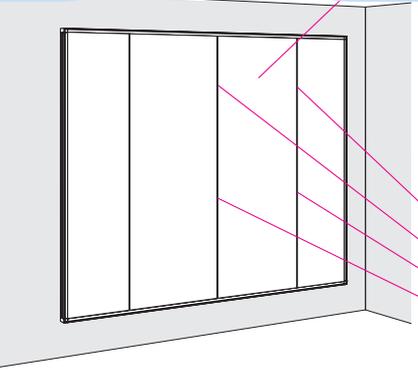


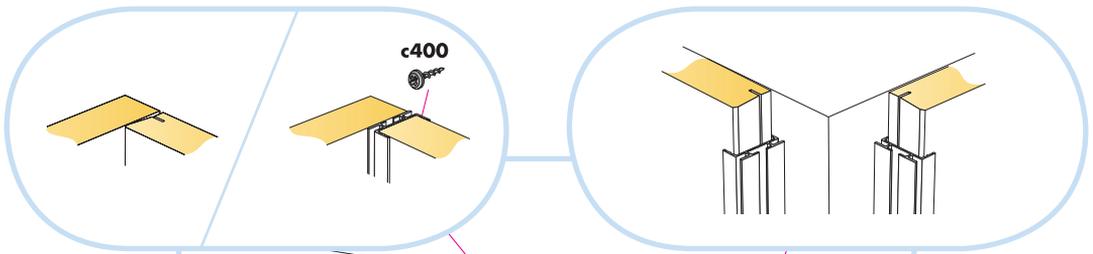

7

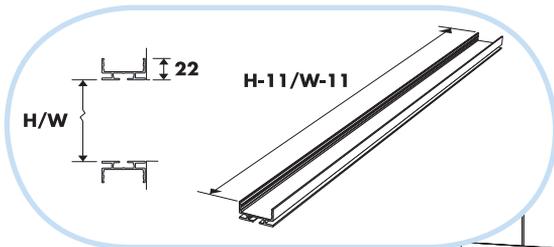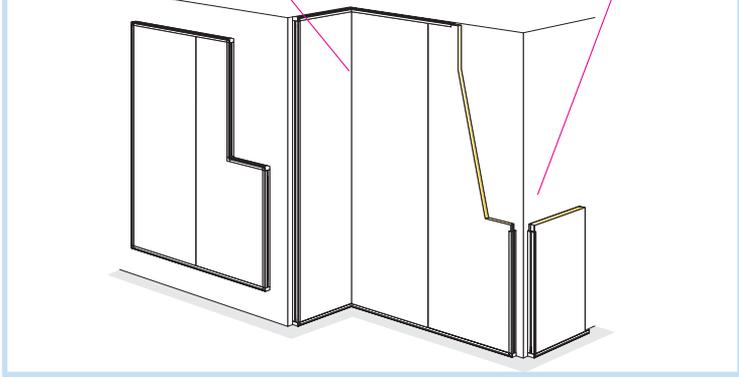

8

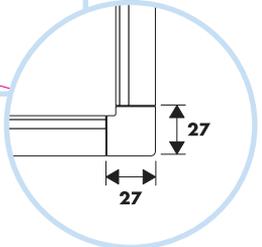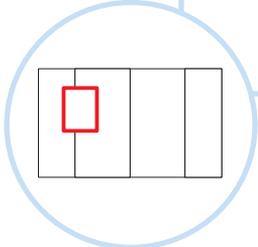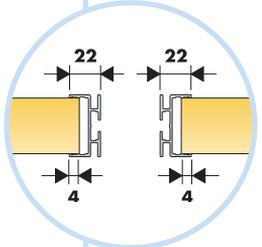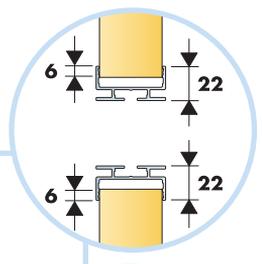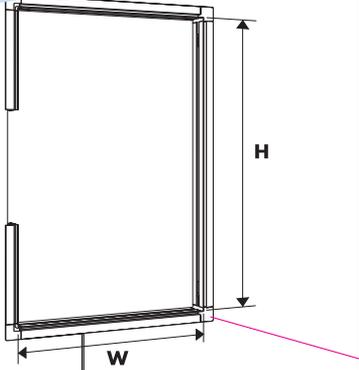

9

