


## Ecophon Wall Panel A

2700x1200

M194

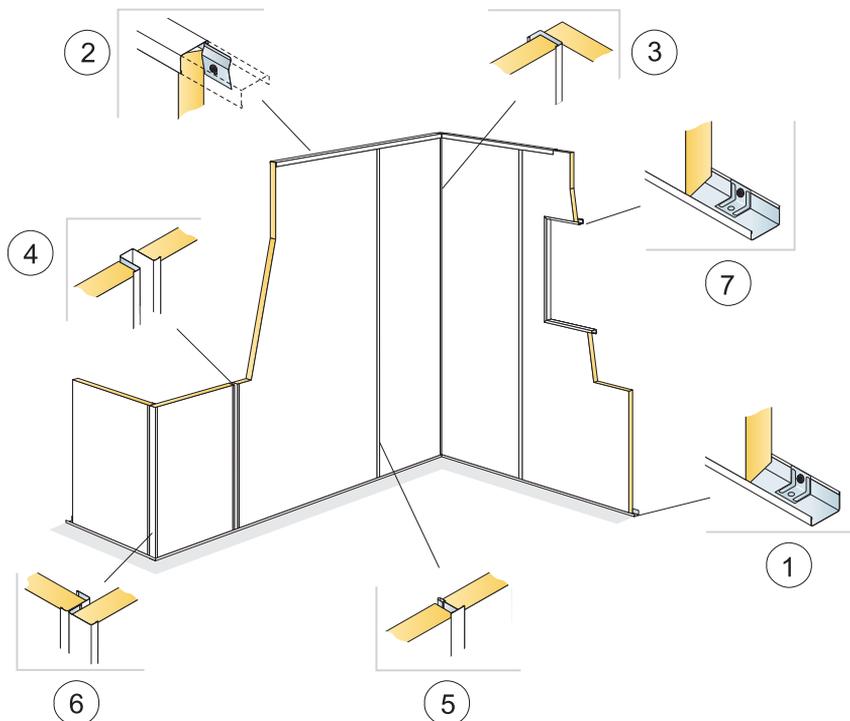


1. Connect Channel trim 0465, L=2700 mm, fixed at 300 mm centres. Connect Direct fixing plate 0032 is placed inside at each fixing point if Wall Panel is not supported by the floor.




2. Connect Channel trim 0465, L=2700 mm, installed with Connect Fixing bracket 0214 at 400 mm centres.



3. Internal wall corner: Connect Channel trim 0465, L=2700 mm, fixed at 400 mm centres.

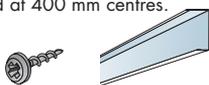

4. Alt Connect Recessed profile 0357, L=2700 mm (Installation: kept in position with the Channel trims).

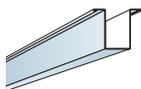

5. Alt Connect T24 Main runner 8101, L=3700 mm. (Installation: kept in position with the Channel trims).





6. External wall corner: Connect Channel trim 0465, L=2700 mm, fixed at 400 mm centres.





7. Frame: Connect Channel trim 0465, L=2700 mm, fixed at 300 mm centres. Connect Direct fixing plate 0032 can be placed inside for extra support.









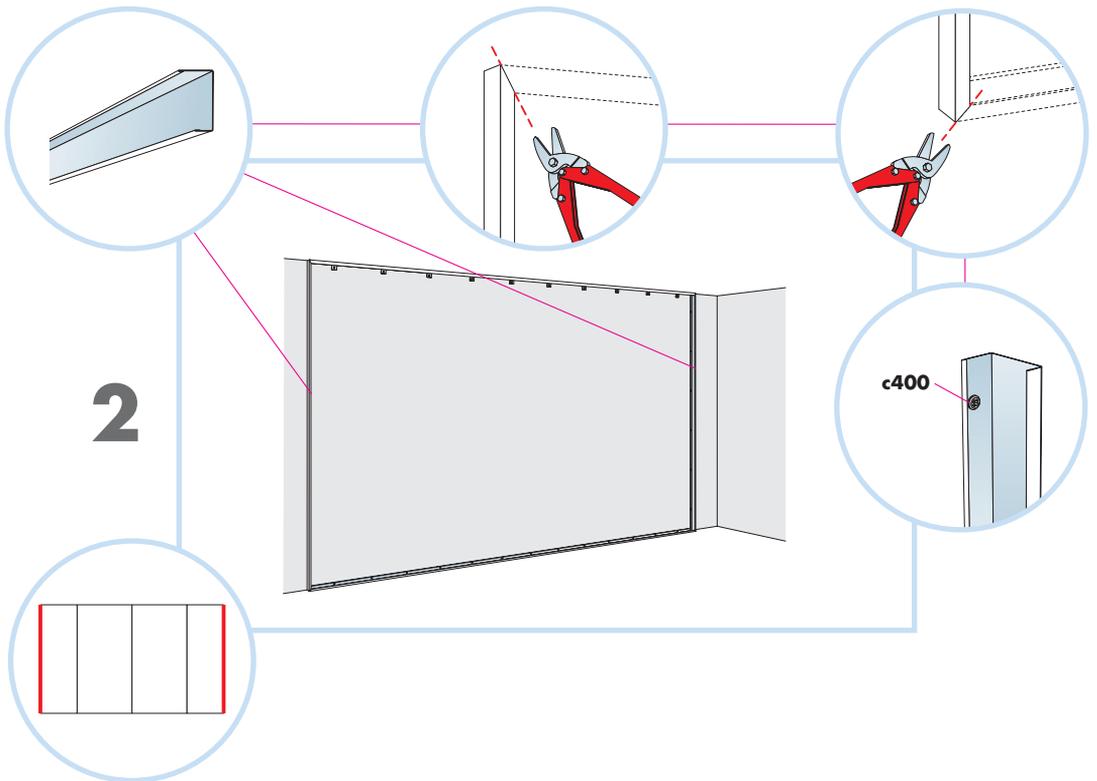
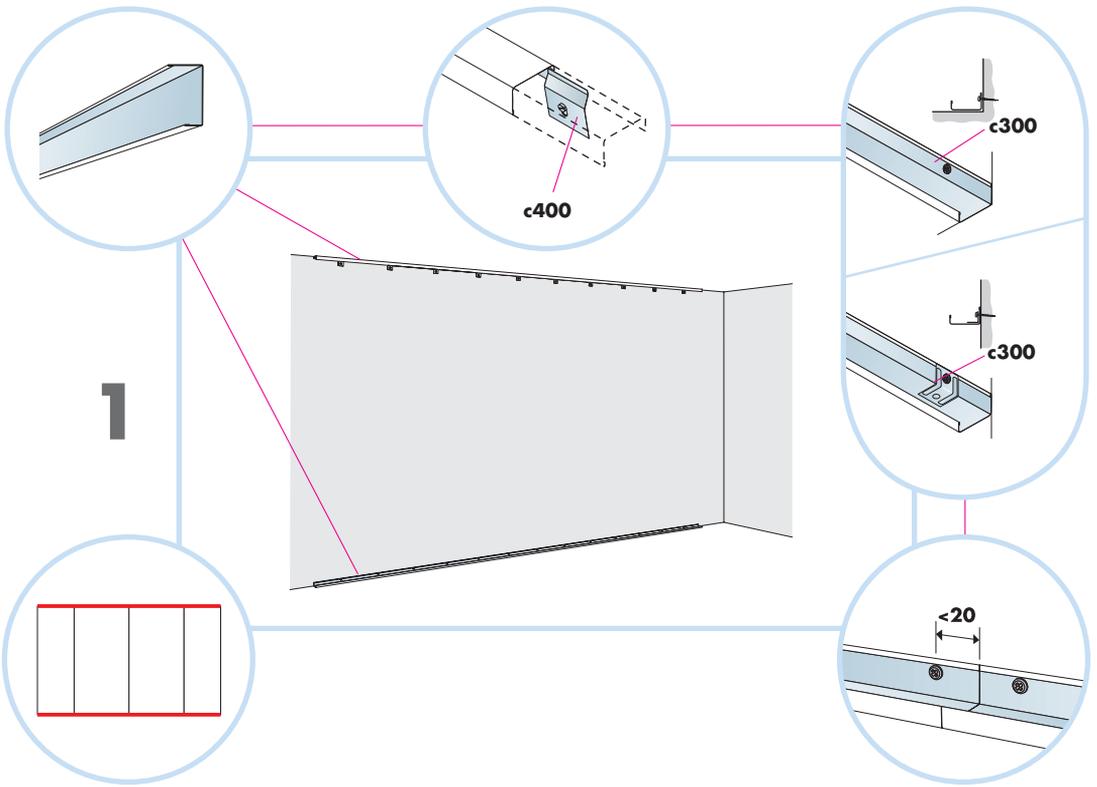


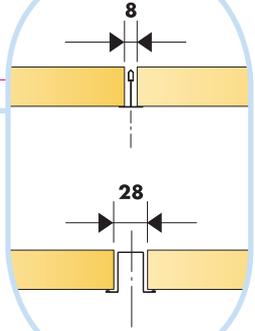
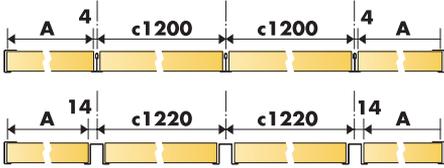


**3**

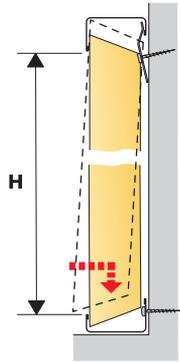
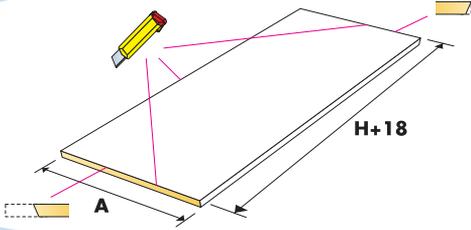

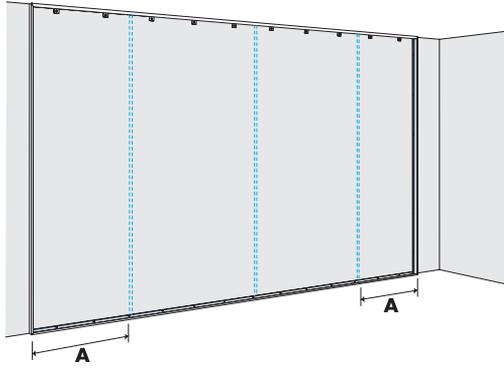


**4**


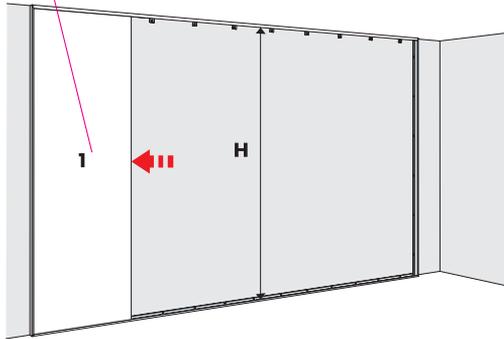


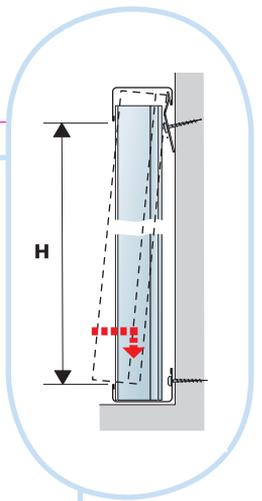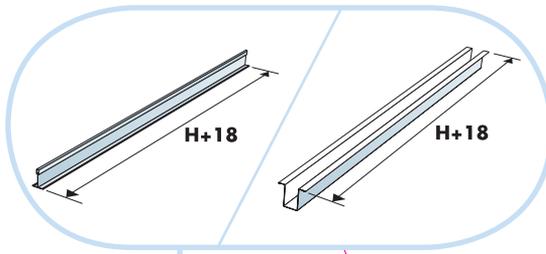


**5**

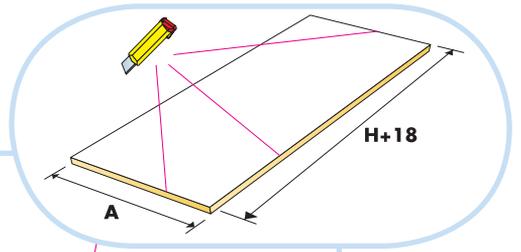
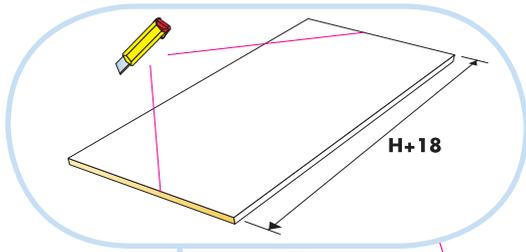
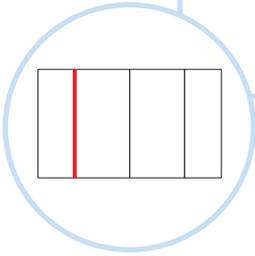
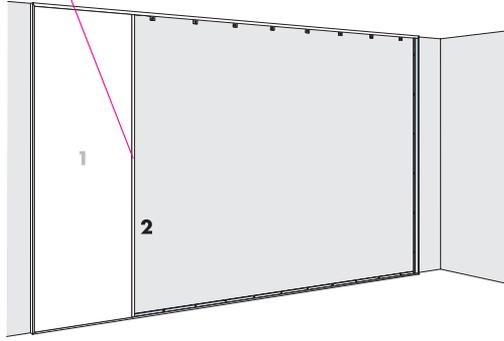


**6**

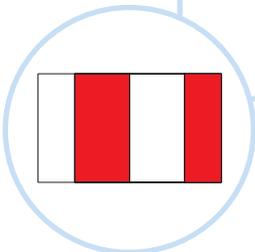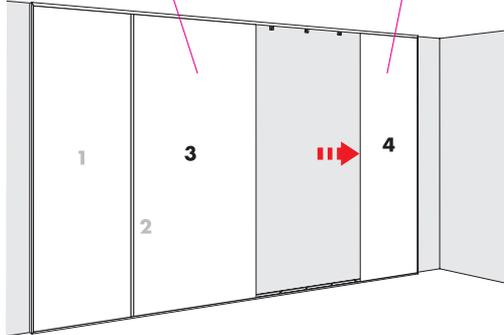

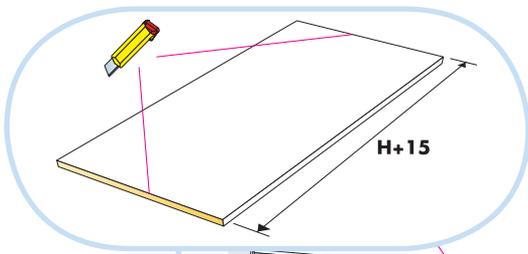

7

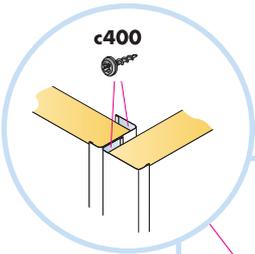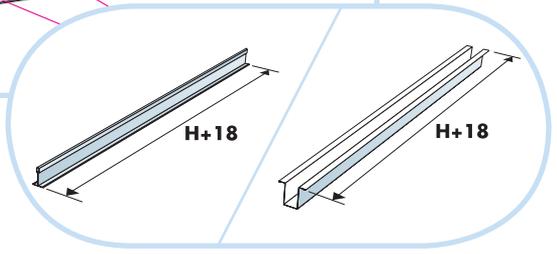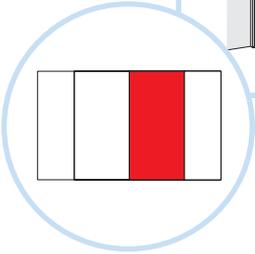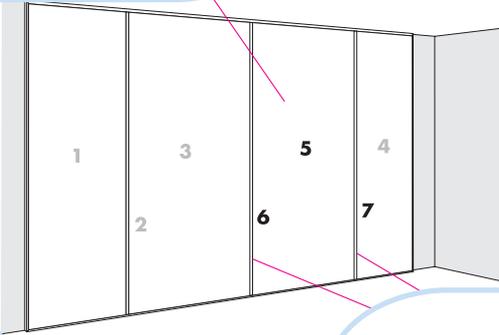

8

